



A.Y. McDonald Mfg. Co. **Stainless Steel Submersible Pump Assembly Guide**

Assembly Guide for 90 GPM Pumps w/6" Motor

PUMP ASSEMBLY TOOLS

KIT	PICTURE	ITEM #	DESCRIPTION	KIT	PICTURE
TORQUE WRENCH KIT		TRQWRN20-110NM	TORQUE WRENCH	JIG SET KIT	
		INSTTRQWRNCH	INSERT FOR TORQUE WRENCH	JIG SEI KII	
		FXSSTRAP6PE	FIXTURE FOR STRAP		
CLEARANCE KIT		STRPSCKT6PEX6MOT	SOCKET FOR STRAP	ASSEMBLY KIT	2
		SHFTDPTCAL6PE	DEPTH CALIPER		
		SHFTDPTHTOOL6PEX6MOT	DEPTH TOOL		
FIXTURE		FXS46810PE	FIXTURE SEAT		
SEAT KIT		LHEXALLENFIXST	HEXAGONAL ALLEN TOOL FIXST		

KIT	PICTURE	ITEM #	DESCRIPTION
JIG SET KIT		JIG6PEX6MOT	JIG 6" MOTOR
		LHEXALLEN6PEX6MOT	6" HEXAGONAL ALLEN TOOL
		THEXALLENCOLIP	HEAXAGONAL ALLEN

		LHEXALLENCOUP	HEAXAGONAL ALLEN TOOL COUP
ASSEMBLY KIT	2	TOOL6PE90	IMPELLER NUT TOOL
	- Company of the Comp	SKTTL90	SOCKET FOR TOOL
		TRQTSTNUT90	TORQUE TESTING NUT



WARNING: It is unlawful in CALIFORNIA & VERMONT (effective 1/1/2010); MARYLAND (effective 1/1/2012); LOUISIANA (effective 1/1/2013) and the UNITED STATES OF AMERICA (effective 1/4/2014) to use any product in the installation or repair of any public water system or any plumbing in a facility or system that provides water for human consumption if the wetted surface area of the product has a weighted average lead content greater than 0.25%. This prohibition does not extend to service saddles used in California, Louisiana or under USA Public Law 111-380. A WARNING: This product can expose you to chemicals including lead, which is known to the State of CALIFORNIA to cause cancer and birth defects or other reproductive harm. For more information go to: www.P65Warnings.ca.gov.

800.292.2737 | sales@aymcdonald.com | aymcdonald.com





(



PUMP COMPONENTS

KIT	PICTURE	DESCRIPTION
STANDARD ASSEMBLY KIT		COUPLING WITH KEY
		DISCHARGE TOP VIEW
		CHECK VALVE TOP VIEW
		TOP STAGE DIFFUSER TOP VIEW BOTTOM VIEW
		TOP STAGE IMPELLER
		INTERCONNECTOR FOR 6" MOTOR
MIDDLE STAGE ASSEMBLY		MIDDLE STAGE DIFFUSER TOP VIEW BOTTOM VIEW
KIT		MIDDLE STAGE IMPELLER
BOTTOM Stage		BOTTOM STAGE DIFFUSER TOP VIEW BOTTOM VIEW
ASSEMBLY KIT		BOTTOM STAGE IMPELLER
		STOP RING

KIT	PICTURE	DESCRIPTION	
		STRAPS	
SPECIFIC COMPONENTS (MOD)		CABLE GUARDS	
		SHAFT	
	00	NUTS	
PLATES KIT		PLATE FOR MODEL & DOE INFORMATION	
BOLTS AND NUTS KIT		NUTS FOR 6" MOTORS	

800.292.2737 | sales@aymcdonald.com | aymcdonald.com

•

5-2020 3210-655



A.Y. McDonald Mfg. Co.

Stainless Steel Submersible Pump Assembly Guide









Fit COUPLING on SHAFT and tighten using HEXAGONAL ALLEN TOOL COUP (clockwise)





Fit Interconnector and Coupling/Shaft on Jig 6" Motor using 19mm wrench and allen wrench (clockwise)







Set down on Fixture Seat and tighten Using Hexagonal Allen tool (clockwise)







Place BOTTOM STAGE IMPELLER on Shaft







Place TORQUE TESTING NUT and use TORQUE WRENCH with INSERT to tight at correct torque (clockwise)







3210-655 5-2020

 
(

7B



Stainless Steel Submersible Pump Assembly Guide











Place BOTTOM STAGE DIFFUSER



Place MIDDLE STAGE IMPELLER





Use TORQUE TESTING NUT and WRENCH to tight at correct torque (clockwise) (Step 7) 10C

Place MIDDLE STAGES **DIFFUSER**



Add as many MIDDLE STAGES as required





Repeat steps 10 and 11 for every MIDDLE STAGE that you need to add to the wet end of the pump

Stages below a torqued **IMPELLER** should not rotate.

Place TOP STAGE IMPELLER







Use TORQUE TESTING NUT and WRENCH to tight at correct torque (clockwise) (Step 7)



Loosen with Allen Tool, remove from Fixture Seat. Remove 6" Jig with Allen Tool from Assembly









A.Y. McDonald Mfg. Co.

Stainless Steel Submersible Pump Assembly Guide



15 Add TOP STAGE DIFFUSER and CHECK VALVE









17 Attach STRAPS to pump and fit at the bottom







Use "food grade never seize" on threads of straps to prevent galling

Place NUTS to tighten STRAPS using SOCKET FOR STRAP





Use TORQUE WRENCH and FIXTURE FOR STRAP to tight at correct torque (clockwise)



20 Pull out SHAFT using DEPTH TOOL





21 Use DEPTH CALIPER to check shaft clearance





22 Pull out SHAFT using DEPTH TOOL



23 Use DEPTH CALIPER to check shaft clearance



REFER TO AXIAL CLEARANCE UP (CHART 1 - PAGE 6)

23B

(



Stainless Steel Submersible Pump Assembly Guide



24

Add PLATE FOR MODEL INFORMATION



24A





(

24C



SHAFT TOLERANCES (CHART 1)

AXIAL CLEARENCE - H(MM)
------------------------	---

MOTOR DIAMETER	MEASURAMENT REFERENCE	DOWN	UP
4"		36.5	39.5-40
6"		71-71.5	75-77
8"	SHAFT/COUPLING	100 MIN 103	MIN 103
10" Franklin		100	MIN 103
10" HITACHI		125.5	MIN 129




TORQUE FOR IMPELLER ASSEMBLY (CHART 2)

TORQUE

MODEL		STRAP (N.M)	IMPELI	ER (N.M)	
90 GPM SERIES	6"	45		4 E	
90 GPM SERIES	6" x 4"	35	,	45	
150 GPM SERIES	6"	45		0.0	
150 GPM SERIES	6" x 4"	35	1	80	
230 GPM SERIES	6"	45	00		
230 GPM SERIES	6" x 4"	35	80		
300 GPM SERIES	6"	45	00		
300 GPM SERIES	6" x 4"	35	- 80		
400 GPM SERIES		100	100	100	
500 GPM SERIES		100	100	100	
650 GPM SERIES		100	160	160	
800 GPM SERIES		100	160	160	
1100 GPM SERIES		100	250	250	

DOE CHART

MODEL	908	150S	230\$	300S
PEI	0.87	0.90	0.88	0.90
IMP. DIA. (IN)	3.5	3.7	4.14	4.14

 

(